

<b>IC-FR3000</b>	<b>VHF 50W FM Repeater / Local Base Station</b>
<b>IC-FR4000</b>	<b>UHF 50W FM Repeater / Local Base Station</b>
<b>FR3000</b>	<b>VHF 150MHz-174MHz</b>
IC-FR3000	12.5 or 25kHz Channel Spacing
<b>FR4000</b>	<b>UHF</b>
IC-FR4000F1	12.5 or 25kHz Channel Spacing, 400MHz-430MHz
IC-FR4000F3	12.5 or 25kHz Channel Spacing, 450MHz-480MHz

#### **Mounting Bracket**

MB77	Wall Mount Bracket
MB78	19"Rack Mount Bracket, 3RLI High

#### **Microphone**

HM152	Microphone (Non Keypad)
HM152T	DTMF microphone
SM25	Desk Microphone, Monitor Switches

#### **Programming Equipment**

CS-FR3000	Dealer Programming Software disc Req OPC478 + OPC592
OPC-478	RS232 Programming Cable
OPC-478UC	USB Programming Cable
OPC-592	Programming Adaptor cable Req CS-FR3000 + OPC478